

TANGO[®]

Coffee Cleaning Instructions



Clean with tablets everyday

The Tango has an advanced cleaning system that requires specially formulated tablets

Use only UNIC brand cleaning tablets.
UNIC #92025 100 tablets/jar



UNIC #92025



Remove Waste Drawer



Unscrew Cleaning Cover



Insert 1 Unic Tablet 2 Tablets for Duo Version



Replace Cleaning Cover Do Not Overtighten!



Replace Drawer



Confirm Drawer Empty Press + for 3 seconds



Cleaning Starts Automatically
The cycle lasts
10 minutes







Rinse Cycles are displayed on the screen as "cleaning"

Automatic Coffee Rinse

Rinses the coffee system every time the waste drawer is removed and confirmed empty



Empty Waste Drawer drawer

17:35 04.05.2015 PUT BACK THE DRAWER



Press and Hold + for 3 seconds after replacing drawer





60-70 ml of hot water will flow from spout

Automatic Milk Rinse

One Step milk machines only See SteamAir instructions for steam wand cleaning

MILK CLEANING PRESS -

Prompts for a milk foamer rinse after aproximately 15 minutes of non-use



Press the # 3 button to start the rinse



Hot Water will flow from spout

Manual Rinse





Press the rinse button to prompt for manual rinses



GROUP CLEANING > +
MILK CLEANING > -



GROUP CLEANING 15 sec
MILK CLEANING > -

Select + to rinse the internal coffee system

No water will flow from spout



Select - to rinse the milk foamer

Hot Water will flow from spout