

Automatic Milk Steaming:


More air creates lighter foam with larger bubbles
Less air creates denser foam with smaller bubbles



Steam Tip must be at least 1" below surface of milk



Press SteamAir Button
Steam will automatically shut OFF at the pre-set temperature

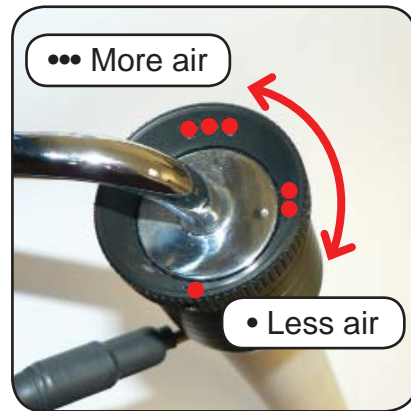

Turn the adjusting collar to vary the amount of air in the milk

The SteamAir wand MUST be wiped and purged after each use to prevent milk build-up



Remove the pitcher and wipe the wand and tip with a clean, damp towel.



Press the Steam Button ON then OFF to purge

*Steam or Water leaking from the air adjustment area?
No Foam in milk?*



*Steam tip is clogged with milk
See next page for cleaning instructions*

Remove and clean the steam tip daily!





Clean the Steam Tip if steam leaks from the air adjusting collar

The SteamAir Wand may be removed for cleaning if it has heavy milk build-up

Switch the machine OFF before removing the Wand!



NEVER soak in cleaner!



Uncrew Steam Tip



Remove Outer wand



Remove Temperature Probe




Wipe Temperature Probe and Inner wand



Clean Outer Wand and Steam Tip in sink

Make sure steam tip holes are clear!

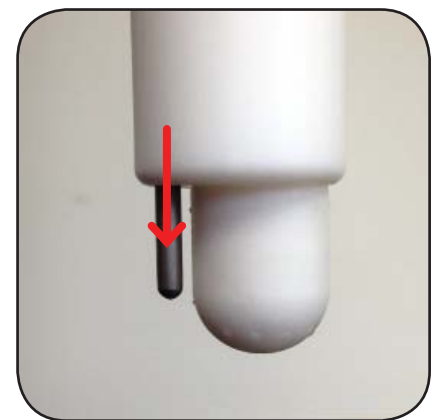

Make sure the probe tip is pushed all the way down when reassembling