


Replace Steam Cartridge

Stella / Mira #25925

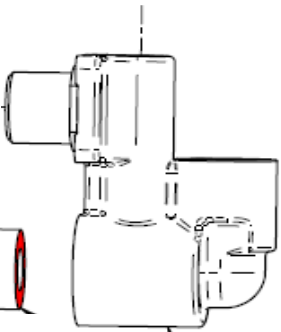

Cartridge
25925

Locking
Collar

Hex Insert
NZ4014

Steam Lever
NZ7003

NM96 Screw



- Remove Steam Lever & Hex Insert
- **On Stella remove the Steam Wand and Cover Plate**
- Unscrew the Locking Collar (25mm wrench)
- Use a 17mm wrench to remove the Cartridge
- **Stella requires a 17mm deep socket**

- Apply silicone grease to flat seal and o-ring of the new cartridge
- Apply Lockite 242 to the cartridge threads
- Place a drop of Lockite in the end of the post to secure the steam lever screw

- Do Not over-tighten the steam lever screw



Silicone Grease



Lockite 242



Screw Threads