

Clean the milk system everyday



*Remove the Foamer to clean twice each week
See other side for instructions*



Rinza tablets or liquid are recommended
Follow label mixing direction if using liquid



Remove Milk



Fill a 16 oz cup with **warm** water



Insert 2 Rinza Tablets into the water



Insert the milk line into the cleaner



Wait 1 minute for the tablets to dissolve



Run a milk cycle 4-5 times until cleaner cup is empty



Repeat with clean water to rinse

Remove & Clean Milk Foamer



Remove the magnetically mounted spout




Unlock the Foamer by twisting it to the right




Remove the Foamer by pulling down



Unscrew the Foamer Cover Tube

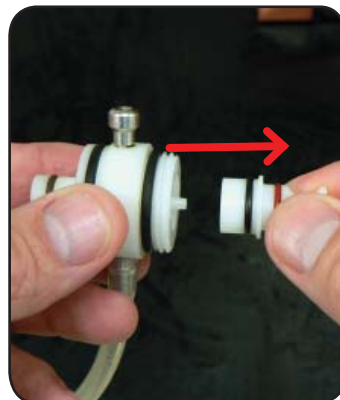

Pull out the top Nozzel

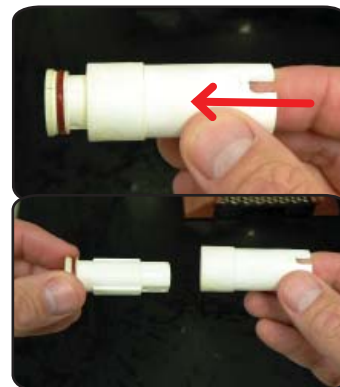

Push the Insert out of the Center Tube



Soak the parts with tablet or liquid milk cleaner if needed



Clean foamer parts in sink



Re-assemble and re-install the Foamer and Spout



**2 times
per
week!**

